

SECTION X - PARTS LIST AND LINE DRAWINGSPARTS LIST - MODEL "E" CECO-DROP

<u>Part No.</u>	<u>Name</u>	<u>Part No.</u>	<u>Name</u>
1	Anvil	83	Lubricator
2	Anvil Cap	97L	Adjusting Wedge (L.H.)
3	Frame	97R	Adjusting Wedge (R.H.)
4	Frame	98	Wearing Plate
5	Ram	99	Wearing Plate
6	Rod	100	Wearing Plate
7	Yoke	108	Right Hand Guide
8	Cylinder	1080	Left Hand Guide
9	Cylinder Cover	111	Guide Clamp Stud
10	Main Valve	112	Guide Clamp Stud
11	Main Valve Seat	116	Stud (500 lb. thru 5000 lb.)
14	Main Valve Cover	116	Bolt (6000 lb. and Larger)
17	Throttle Valve	123	Connection (6000 lb. and Larger)
21	Inlet Gland	125	Throttle Valve Arm
22	Exhaust Gland	139	Clamp (6000 lb. and Larger)
23	Piston Gland Flange	150	Stud
24	Throat Bushing	152	Bushing
26	Inlet Nipple	154	Key
27	Exhaust Nipple	155	Washer
35	Lever	162	Cylinder-to-Yoke Stud
36	Stop	163	Gland Bolt (Inlet-All Sizes; Exhaust-All Sizes except 2500 lb.)
37	Anvil Cap Key		
39	Frame-to-Anvil Stud	1631	Gland Bolt (Exhaust - 2500 lb.)
40	Washer	166	Clamp Cylinder Packing
41	Piston Ring	167	Packing (Inlet-All Sizes; Exhaust- All Sizes except 2500 lb.)
42	Piston Ring		
45	Clamp Cylinder	1671	Packing (Exhaust - 2500 lb.)
46	Piston Ring	168	Piston Rod Packing
47	Connection Rod	170	Clamp Cyl.-to-Yoke Stud
50	Clamp Hanger	171	Pin
51B	Clamp Bar (Back)	178	Stud
51F	Clamp Bar (Front)	179	Pin
52	Rod Clamp	181	Pin
53L	Half Clamp Bushing (L.H.)	193	Throttle Valve Seat
53R	Half Clamp Bushing (R.H.)	205	Bushing
58	Gland	206	Gland Body
59	Coupling	208	Washer
63	Frame-to-Yoke Stud	210	Bushing
65	Tie Bar	211	Bushing Collar
72	Cylinder-to-Yoke Spring	212	Washer
73	Frame-to-Anvil Spring	213	Washer
74	Frame-to-Yoke Spring	214	Washer
75	Tie Bar Spring	215	Tubing
76	Clamp Cyl.-to-Yoke Spring	217	Bushing
78	Throttle Valve Rod	229	Wearing Plate

SECTION X - PARTS LIST AND LINE DRAWINGS

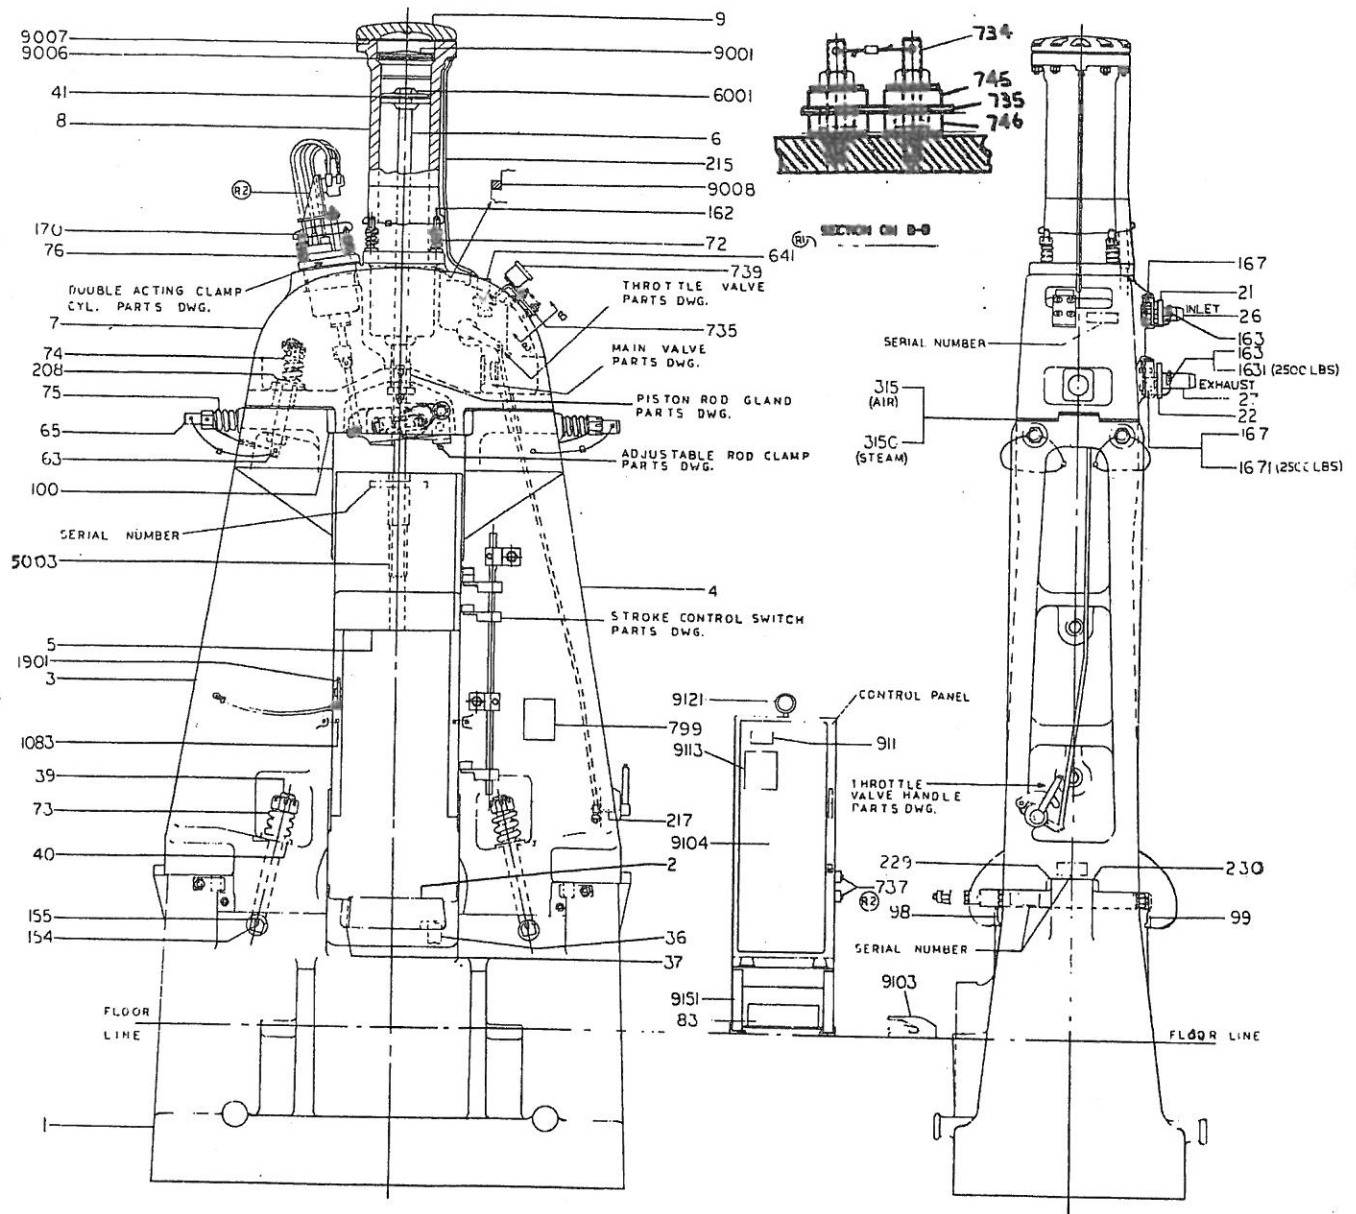
PARTS LIST - MODEL "E" CECO-DROP (cont'd)

<u>Part No.</u>	<u>Name</u>	<u>Part No.</u>	<u>Name</u>
230	Wearing Plate	495	Shim
231	Nut	496	Pad (500 lb. thru 5000 lb.)
260	O Ring	497L	Block (L.H.) (500 lb. thru 5000 lb)
262	Washer	497R	Block (R.H.) (500 lb. thru 5000 lb)
263	Key	506	Chain
298	Bolt	514	Dowel
299	O Ring	515	Spring
315	Fabreeka Pad	526	Clutch
316	Fabreeka Pad	527	Plate
317	Fabreeka Pad	529	Pin
318	Fabreeka Pad	530	Washer
319	Fabreeka Pad	531	Nut
322	Pin	533	Retainer
323	Pin	543	Clamp Cylinder Cover
324	Washer	546	Pin
326	Washer	547	Plunger
338	Bushing	548	Spring
339	Washer	549	Clamp Adjusting Plier
341	Pivot Bushing	550	Drain Cock
351	O Ring	602	Valve
353	Spacer	641	Valve
3531	Spacer (6000 lb. and Larger)	675	Filter
354	Washer	720	Plunger
363	Washer	721	Bushing
364	Segment Stud	722	Rider Ring
392	O Ring	723	Piston Ring
399	Hose	724	Rider Ring
402	Hose	725	Piston Ring
403	Lever (6000 lb. and Larger)	727	Shim
404	Lever (6000 lb. and Larger)	728	Spacer
405	Pin (6000 lb. and Larger)	729	"O" Ring
406	Hose	730	Shim
407	Check Valve	731	Bushing
408	Elbow	734	Stud
409	Elbow	735	Bracket
410	Elbow	736	Bumper
413	Washer	737	Pressure Switch
432	Piston Ring	738	Hose Fitting
441	Bracket	739	Junction Box
444	Clamp Cylinder Piston	745	Bushing Mount
463	Pin	746	Ring Mount
465	Bolt	751	Shim
466	O Ring	752	Shim
467	O Ring	753	"O" Ring
470	O Ring	799	Name Plate
471	Washer	1083	Meter
479	Washer	1751	Stud
488	Segment	1901	Wedge
494	Fabreeka Pad	2616	Shaft
		2617	Shaft

SECTION X - PARTS LIST AND LINE DRAWINGS

PARTS LIST - MODEL "E" CECO-DROP (cont'd)

<u>Part No.</u>	<u>Name</u>	<u>Part No.</u>	<u>Name</u>
2618	Rubber Bushing	9146	Amplifier
2630	Top Mount	9146	Bulb
2631	Rod	9148	Signal Converter
2632	Bottom Mount	9148A	Bulb
2633	Holder	9149	Neon Monitor Light
2634	Proximity Switch	9151	Control Panel Stand
2635	Holder	9162	Resistor
3401	Throttle Valve Handle	9163	Stand-off Insulator Kit
3404	Plunger	9164	Capacitor
3407	Spring	9165	Horn
4160	Piston Ring	9166	Capacitor
5003	Ram Bushing	9167	Resistor
5801	Gland Bushing	9168	Resistor
5802	Shim	9169	Resistor (Blowmatic only)
6001	Piston Head	9170	Fuse
9001	Plunger	9171	Fuse Block
9006	Piston Ring	9174	Running Time Meter
9007	Gasket	9176	OR-DIODE Pack (Blowmatic only)
9008	O Ring	9178	Production Counter
9101	Starter	9179	Limit Switch
9102	Transformer	9180	Mushroom Pushbutton
9103	Foot Switch	9181	Selector Switch (Blowmatic)
9104	Control Panel	9182	Selector Switch
9105	Relay	9183	Selector Switch
9106	Socket	9184	Resistor
9107	Fuse	9186	Selector Switch
9108	Fuse	9195	Capacitor
9109	Selector Switch	9196	Capacitor
9110	Pushbutton-Start	9203	Probe Testor
9111	Indicating Light	9218	Insertion Tool
9112	Pushbutton - Stop	9523	Warning Plate
9117	Selector Switch (Blowmatic only)	9801	Adjusting Wedge
9121	Signal Lamp	9901	Adjusting Wedge
9122	Socket		
9123	Flasher		
9124	12 V. Transformer		
9125	Fuse		
9135	Power Pack (Blowmatic only)		
9136	Nor-20 Pack		
9137	Decade Counter (Blowmatic only)		
9138	Timer Pack		
9139	Selector Switch (Blowmatic only)		
9140	Power Supply		
9140A	Fuse		
9140B	Fuse		
9145	Time Delay Pack		

SECTION X - PARTS LIST AND LINE DRAWINGSMODEL "E" CECO-DROP

GENERAL ASSEMBLY