



WHEN ORDERING REPLACEMENTS, STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE AND DESIGNATE PART BY BOTH NAME AND NUMBER.

- |     |   |     |                                  |
|-----|---|-----|----------------------------------|
| 201 | ECCENTRIC SHAFT                               | 217 | FLYWHEEL SHAFT                   |
| 202 | ECCENTRIC SHAFT SLEEVE - GEAR END             | 218 | BEARING - PINION END             |
| 203 | ECCENTRIC SHAFT SLEEVE BUSHING - GEAR END     | 219 | BEARING - FLYWHEEL END           |
| 204 | ECCENTRIC SHAFT SLEEVE - INTERMEDIATE         | 223 | BEARING SPACER - PINION END      |
| 205 | ECCENTRIC SHAFT SLEEVE BUSHING - INTERMEDIATE | 228 | BEARING RETAINER - PINION END    |
| 206 | ECCENTRIC SHAFT SLEEVE - CAM END              | 229 | BEARING SEAL RING - PINION END   |
| 207 | ECCENTRIC SHAFT SLEEVE BUSHING - CAM END      | 232 | BEARING SEAL RING - FLYWHEEL END |
| 208 | DIE CLOSING CAM                               | 233 | BEARING RETAINER - FLYWHEEL END  |
| 209 | DIE CLOSING CAM RETAINING NUT                 | 234 | ECCENTRIC SHAFT ECCENTRIC DISC   |
| 211 | MAIN GEAR                                     | 235 | ECCENTRIC DISC RETAINING RING    |
| 212 | MAIN PINION                                   | 227 | BEARING SPACER - PINION END      |