



WHEN ORDERING REPLACEMENTS STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE AND DESIGNATE PART BY BOTH NAME AND NUMBER.

- 201 CRANKSHAFT
- 202 GEAR END CRANKSHAFT SLEEVE
- 203 GEAR END CRANKSHAFT SLEEVE BUSHING
- 204 INTERMED'ITE CRANKSHAFT SLEEVE
- 205 INTERMED'ITE CRANKSHAFT SLEEVE BUSHING.
- 206 CAM END CRANKSHAFT SLEEVE
- 207 CAM END CRANKSHAFT SLEEVE BUSHING.
- 208 DIE CLOSING CAM
- 209 DIE CLOSING CAM RETAINING NUT
- 210 TRIP LATCH CAM
- 211 MAIN GEAR
- 212 MAIN PINION.

- 213 INTERMEDIATE SHAFT BUSHINGS
- 214 INTERMEDIATE SHAFT
- 215 HERRINGBONE GEAR
- 216 HERRINGBONE PINION.
- 217 FLYWHEEL SHAFT
- 218 TIMKEN BEARING - PINION END
- 219 TIMKEN BEARING - FLYWHEEL END.
- 220 FLYWHEEL SHAFT BRG. SEAL RINGS
- 221 FLYWHEEL SHAFT BRG. LOCK COLLAR.
- 222 FLYWHEEL SHAFT BRG. SPACER COLLARS
- 223 FLYWHEEL SHAFT BRG. SPACER RINGS.
- 224 FLYWHEEL SHAFT SET COLLAR
- 225 FLYWHEEL SHAFT BUSHING- PINION END.
- 226 FLYWHEEL SHAFT BUSHING- FLYWHEEL END.