



- R 169 ROLL HOUSING-R.H.
 R 170 ROLL HOUSING-L.H.
 R 171 TOP ROLL SHAFT BRG-R.H.
 R 172 TOP ROLL SHAFT BRG-L.H.
 R 173 TOP ROLL SHAFT BRG STUDS
 R 174 ROLL HOUSING TIE ROD
 R 175 ROLL HOUSING SPACER

 R 177 GEAR HOUSING
 R 178 BASE PLATE
 R 179 TOP ROLL SHAFT
 R 180 BOTTOM ROLL SHAFT
 R 181 ROLL HOUSING FLANGED BUSHING
 R 182 TOP ROLL SHAFT BRG. SHIELD RING
 R 183 BOTTOM ROLL SHAFT BRG. SHIELD RING
 R 184 ROLL SHAFT END COVER
 R 185 TOP ROLL SHAFT GEAR
 R 186 TOP ROLL ADJUSTING SLEEVE
 R 187 TOP ROLL ADJUSTING SLEEVE EYE BOLT
 R 188 TOP ROLL ADJUSTING SLEEVE POPPET
 R 189 TOP ROLL ADJUSTING SLEEVE EYE BOLT PIN
 R 190 TOP ROLL ADJUSTING SLEEVE STUD & WASHER

- R 191 BOTTOM ROLL SHAFT GEAR
 R 193 BOTTOM ROLL SHAFT THRUST RING
 R 195 GEAR HOUSING BUSHING

WHEN ORDERING REPLACEMENTS, STATE SERIAL NUMBER
 AND SIZE STAMPED ON NAME PLATE OF MACHINE AND
 DESIGNATE PART BY BOTH NAME AND NUMBER