


VIEW OF BOTTOM ROLL SHAFT SHOWING EXTENSION FOR TIMER CAM FOR CLUTCH OPERATED ROLLS

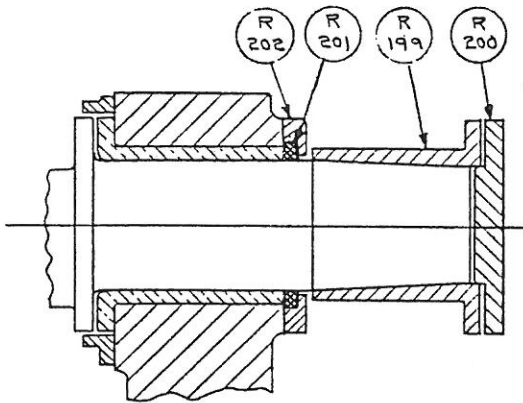

VIEW OF ROLL SHAFTS SHOWING EXTENSION FOR OVERHUNG DIES

- R 169 ROLL HOUSING-R.H.
- R 170 ROLL HOUSING-L.H.
- R 171 TOP ROLL SHAFT BRG-R.H.
- R 172 TOP ROLL SHAFT BRG-L.H.
- R 173 TOP ROLL SHAFT BRG. STUDS
- R 174 ROLL HOUSING TIE ROD
- R 175 ROLL HOUSING SPACER
- R 176 ROLL HOUSING SPACER SLEEVE
- R 177 GEAR HOUSING
- R 178 BASE PLATE
- R 179 TOP ROLL SHAFT
- R 180 BOTTOM ROLL SHAFT
- R 181 ROLL HOUSING FLANGED BUSHING
- R 182 TOP ROLL SHAFT BRG. SHIELD RING
- R 183 BOTTOM ROLL SHAFT BRG. SHIELD RING
- R 184 ROLL SHAFT END COVER
- R 185 TOP ROLL SHAFT GEAR
- R 186 TOP ROLL ADJUSTING SLEEVE
- R 187 TOP ROLL ADJUSTING SLEEVE EYE BOLT
- R 188 TOP ROLL ADJUSTING SLEEVE POPPET
- R 189 TOP ROLL ADJUSTING SLEEVE EYE BOLT PIN
- R 190 TOP ROLL ADJUSTING SLEEVE STUD & WASHER
- R 191 BOTTOM ROLL SHAFT GEAR
- R 192 BOTTOM ROLL SHAFT SPACER COLLAR
- R 193 BOTTOM ROLL SHAFT THRUST RING
- R 194 BOTTOM ROLL SHAFT THRUST RING HOLD BACK SCREW
- R 195 GEAR HOUSING BUSHING
- R 196 BOTTOM ROLL SHAFT ADJUSTING PLUG
- R 197 BOTTOM ROLL SHAFT ADJUSTING PLUG SET SCREWS
- R 198 BOTTOM ROLL SHAFT END RETAINER COLLAR
- R 199 OVERHUNG DIE SLEEVE
- R 200 OVERHUNG DIE SLEEVE RETAINER PLATE
- R 201 ROLL SHAFT BEARING SHIELD
- R 202 ROLL SHAFT BEARING SHIELD RETAINER
- R 228 L.H. MSG. HOLD DOWN SCREWS (STD. CAP SCREW)
- R 229 R.H. MSG. HOLD DOWN SCREWS (SPECIAL CAP SCREW)

WHEN ORDERING REPLACEMENTS, STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE AND DESIGNATE PART BY BOTH NAME AND NUMBER