



WHEN ORDERING REPLACEMENTS, STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE AND DESIGNATE PART BY BOTH NAME AND NUMBER.

- R-100 PINION SHAFT.
- R-101 MAIN PINION.
- R-103 ROLLER BEARING (INNER END).
- R-105 PINION SHAFT END CAP.
- R-106 SPACER (INNER END).
- R-108 ROLLER BEARING (FLYWHEEL).
- R-411 BRAKE DRUM SPACER RING.
- R-412 BEARING RETAINER COLLAR (PINION).
- R-413 SEAL RING (PINION).
- R-414 BEARING SPACER RING (CLUTCH).
- R-415 SEAL RING (CLUTCH).
- R-416 BEARING RETAINER COLLAR (CLUTCH).