



WHEN ORDERING REPLACEMENTS STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE AND DESIGNATE PART BY BOTH NAME AND NUMBER.

- |  |   |
|--|---|
| 1201 ECCENTRIC                                 | 1214 PINION SHAFT R.H. BEARING SPACER RING  |
| 1202 ECCENTRIC RIGHT HAND SLEEVE               | 1215 PINION SHAFT SET COLLAR                |
| 1203 ECCENTRIC R.H. SLEEVE BUSHING             | 1216 PINION SHAFT LEFT HAND ROLLER BEARING  |
| 1204 ECCENTRIC LEFT HAND SLEEVE                | 1217 PINION SHAFT L.H. BEARING SEAL RING    |
| 1205 ECCENTRIC L.H. SLEEVE BUSHING             | 1218 PINION SHAFT L.H. BEARING SPACER RING  |
| 1206 MAIN GEAR                                 | 1219 PINION SHAFT L.H. BEARING END COLLAR   |
| 1207 MAIN GEAR RETAINING PLATE                 | 1226 BOTTOM KNOCKOUT RETAINER               |
| 1208 MAIN PINION                               | 1249 ROTARY CAM LIMIT SWITCH DRIVE SPROCKET |
| 1209 PINION SHAFT                              | 1401 BOTTOM KNOCKOUT CAM                    |
| 1210 MAIN PINION RETAINING PLATE               | 101 BRAKE DRUM                              |
| 1211 PINION SHAFT RIGHT HAND ROLLER BEARING(S) | 1250 RAM POSITION ARROW                     |
| 1212 PINION SHAFT R.H. BEARING END COLLAR      |   |
| 1213 PINION SHAFT R.H. BEARING SEAL RING       |   |