



- 1500 BALANCE CYL.
 1501 BALANCE CYL. HEAD.
 1502 BALANCE CYL. PISTON.
 1503 BALANCE CYL. PISTON RING.
 1504 BALANCE CYL. HEAD SCREEN.
 1505 BALANCE CYL. HEAD SCREEN RETAINER PLATE.
 1506 BALANCE CYL. PISTON ROD.
 1507 BALANCE CYL. PISTON ROD PACKING.
 1508 BALANCE CYL. PISTON ROD PACKING GLAND.
 1510 BALANCE CYL. PISTON ROD NUT.
 1511 BALANCE CYL. PISTON THRUST WASHER.

WHEN ORDERING RE-
 PLACEMENTS, STATE
 SERIAL NUMBER AND
 SIZE STAMPED ON NAME
 PLATE OF MACHINE, AND
 DESIGNATE PART BY
 BOTH NAME AND NUMBER.

INSTRUCTIONS FOR ASSEMBLY OF BALANCE CYLINDER

WHEN ASSEMBLING CYLINDER TO RAM DRAW BOTH TOP AND BOTTOM NUTS UP
 HAND TIGHT. (DO NOT TIGHTEN WITH WRENCH.) THEN PIN NUTS IN PLACE.