


- | | | | |
|-----|----------------------------|-----|-------------------------------------|
| 517 | TIE ROD | 928 | IDLER SPROCKET PIN |
| 519 | DRIVEN SPROCKET | 929 | IDLER SPROCKET |
| 520 | SPROCKET RETAINER WASHER | 930 | IDLER SPROCKET RETAINER WASHER |
| 521 | DRIVING SPROCKET | 931 | IDLER SPROCKET ROLLER BEARING |
| 522 | ROLLER CHAIN | 932 | FLEXIBLE COUPLING WITH ADAPTER RING |
| 523 | IDLER ROLLER | 933 | HOLLOW DRIVING SHAFT |
| 524 | IDLER ROLLER BEARING | 934 | INNER BEARING |
| 525 | IDLER ROLLER PIN | 935 | OUTER BEARING |
| 526 | IDLER ROLLER RETAINING CAP | 936 | BEARING LOCKNUT |
| 527 | IDLER ARM | 937 | BEARING SUPPORT BRACKET |
| 528 | IDLER ARM FULCRUM PIN | 938 | SPROCKET SUPPORT STAND |
| 529 | EYEBOLT LINK PIN | 939 | SPACER BRACKET |
| 530 | IDLER ADJUSTING EYEBOLT | | |
| 531 | EYEBOLT SPACER WASHER | | |
| 532 | EYEBOLT SWIVEL PIN | | |

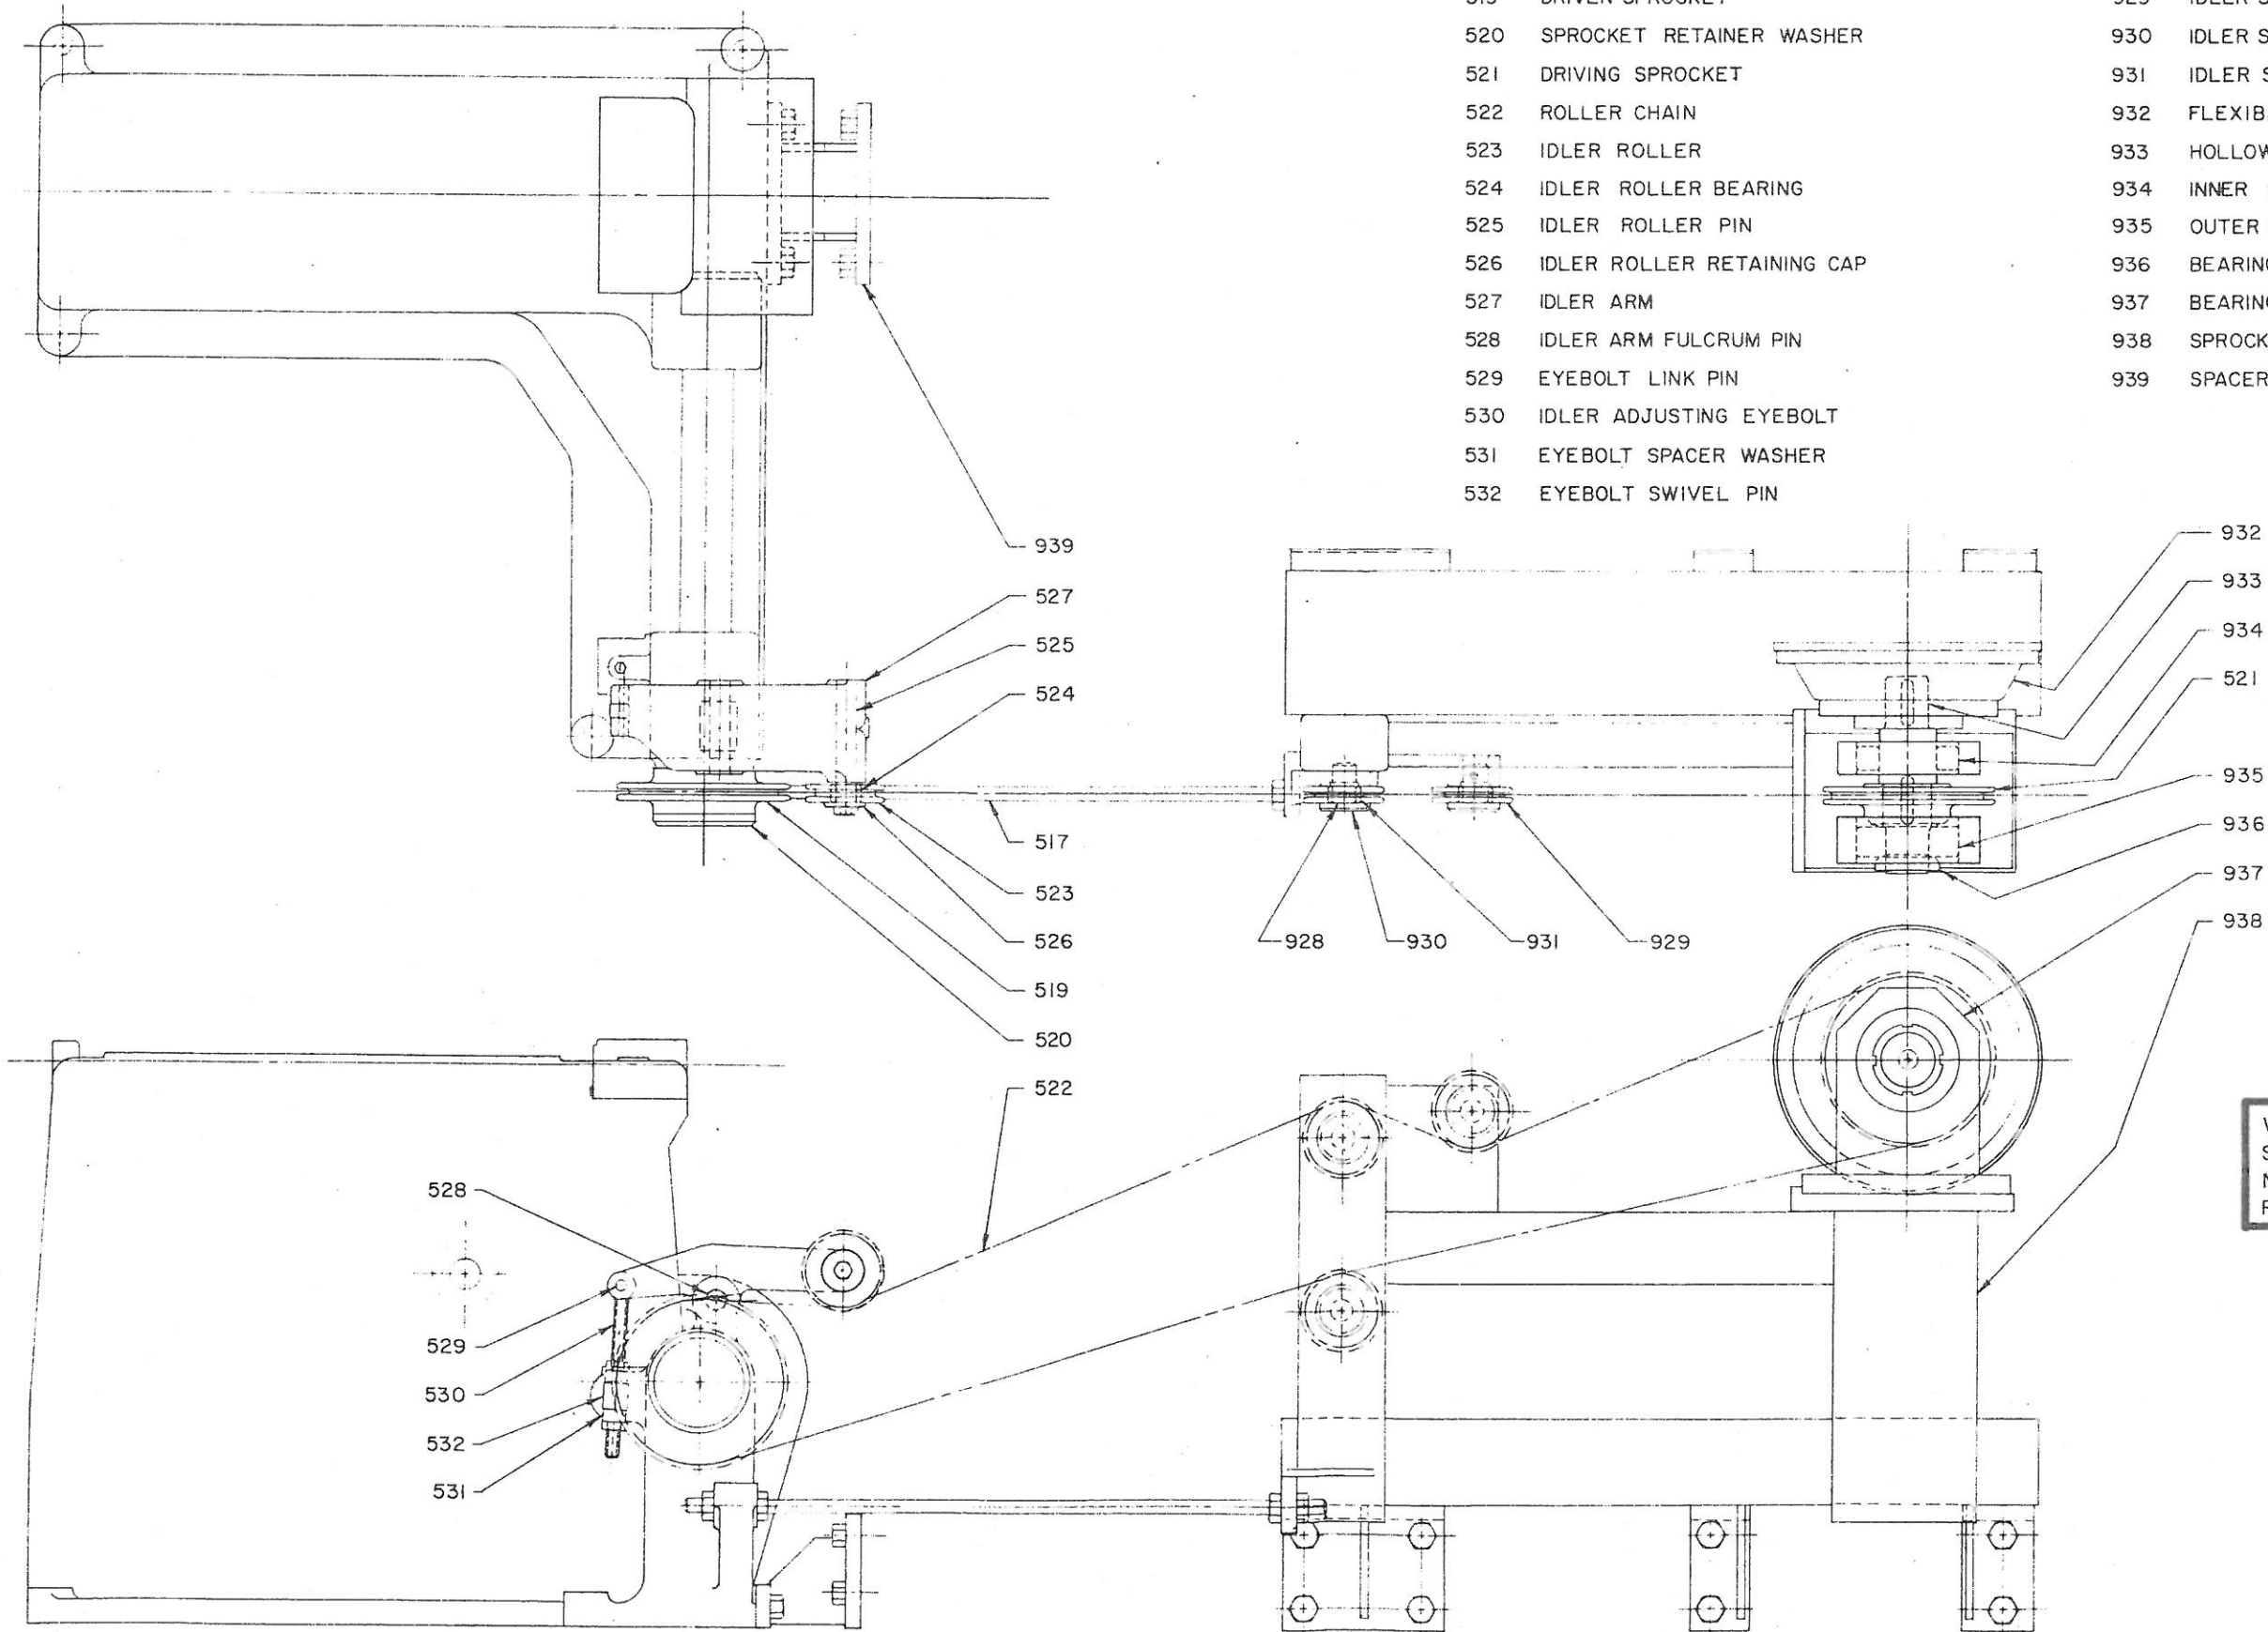

WHEN ORDERING REPLACEMENTS, STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE, AND DESIGNATE PART BY BOTH NAME AND NUMBER.