

 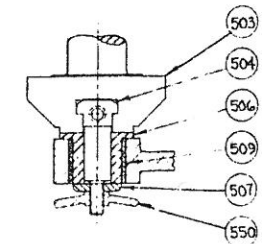


Ajax


Ajax

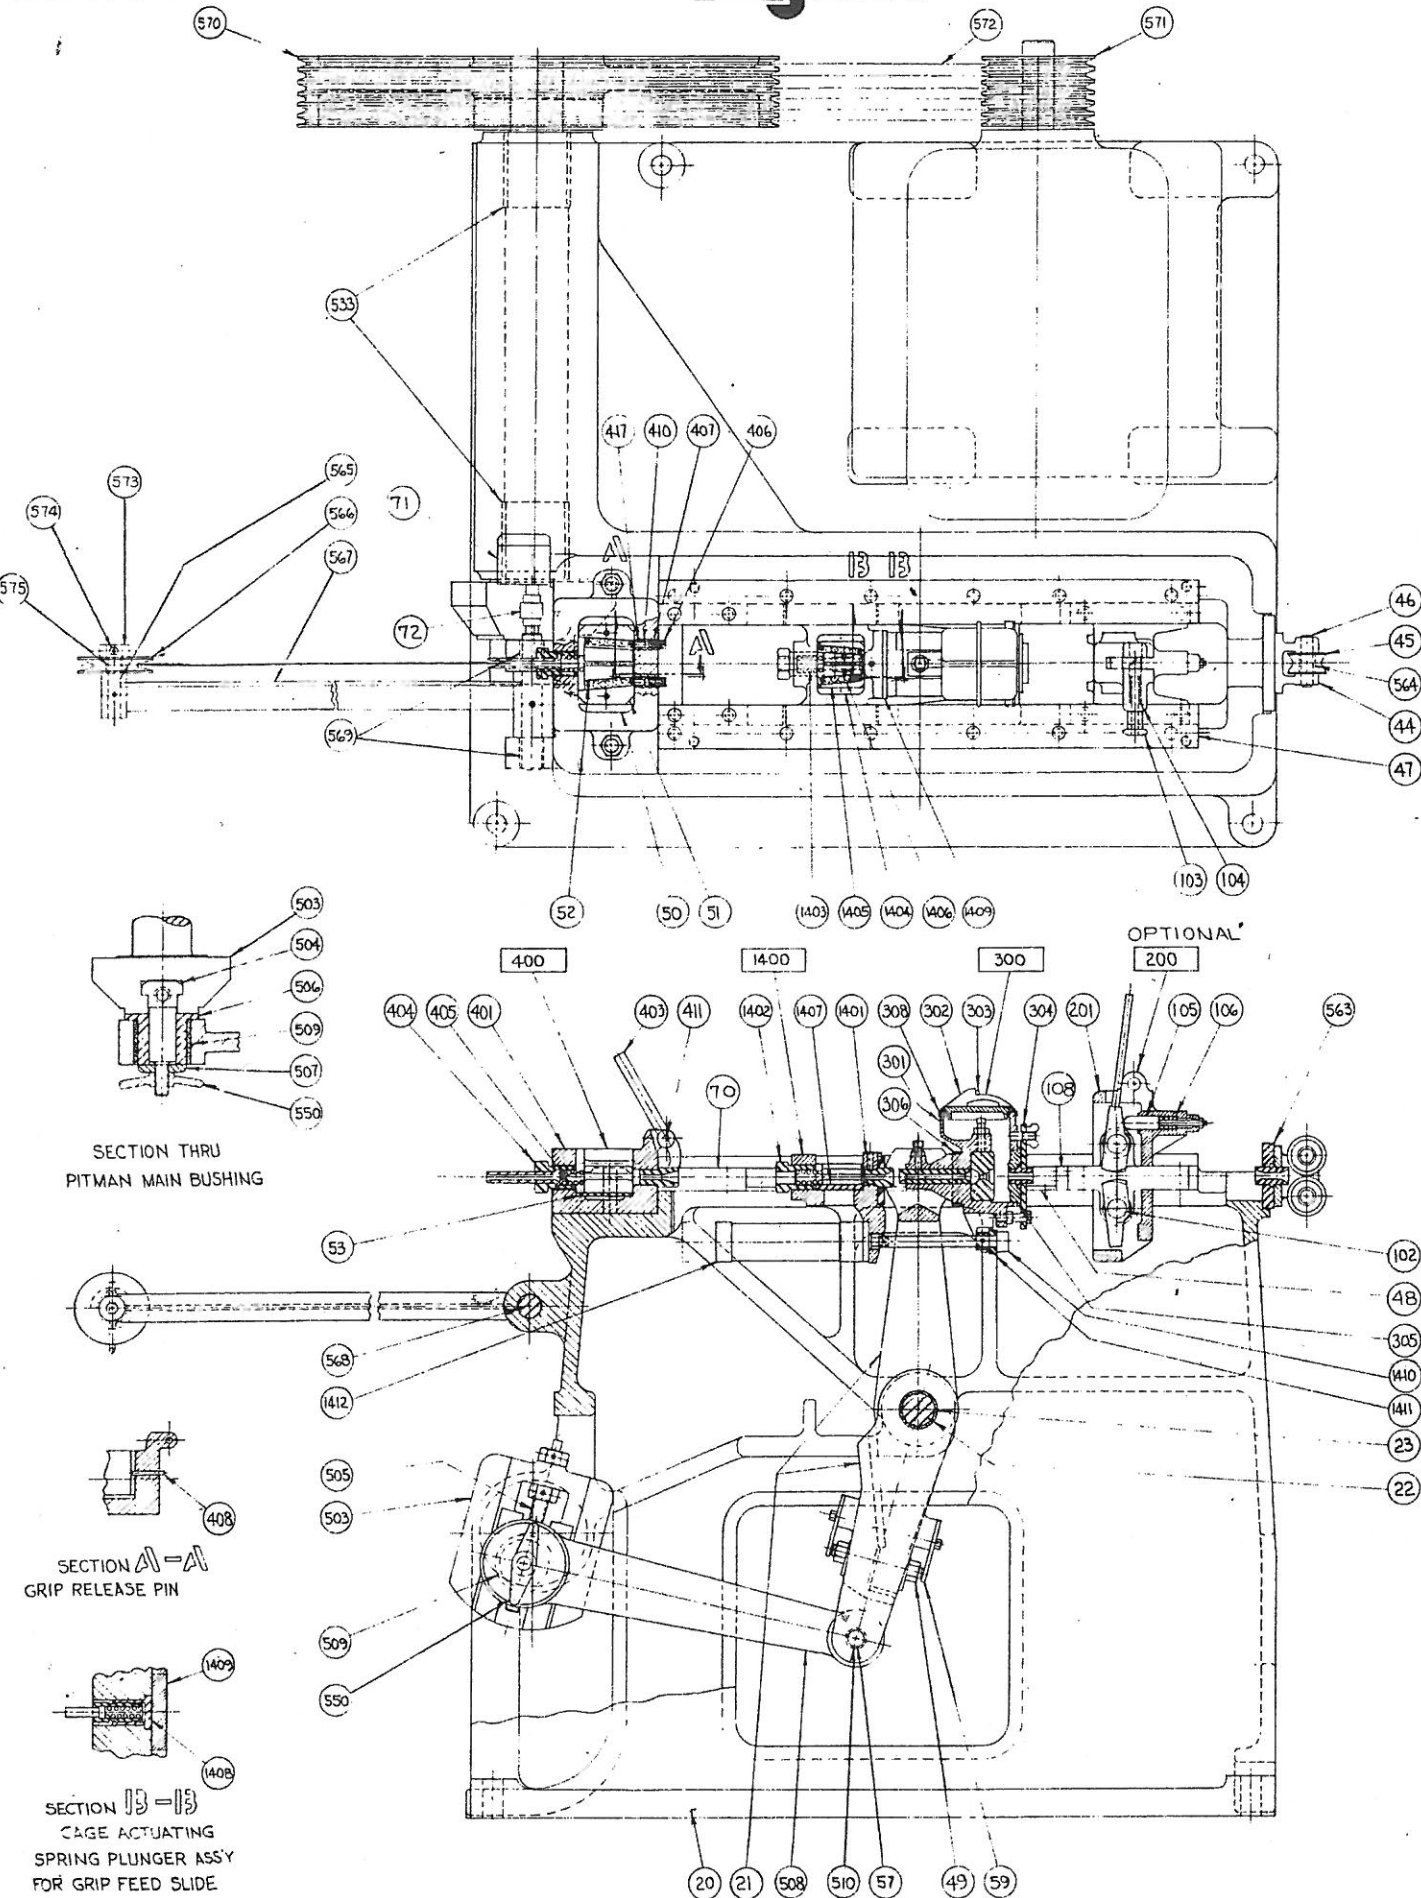

SECTION THRU
PITMAN MAIN BUSHING



SECTION A-A
GRIP RELEASE PIN

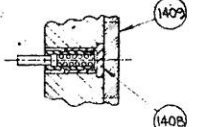

SECTION B-B
CAGE ACTUATING
SPRING PLUNGER ASSY
FOR GRIP FEED SLIDE

- 20 BASE
- 21 DRAWING ARM
- 22 DRAWING ARM FULCRUM PIN
- 23 DRAWING ARM FULCRUM PIN BUSHINGS
- 44 STRAIGHTENER BRACKET
- 45 GUIDE ROLLERS
- 46 PINS FOR GUIDE ROLLER
- 47 COVER PLATES FOR SLIDES
- 48 LINERS FOR BASE
- 49 BREAKER BOLT FOR DRAWING ARM
- 50 BACKING BLOCKS FOR GRIP
- 51 STATIONARY WEDGE BLOCKS FOR GRIP
- 52 ROLLER CAGES
- 53 BOTTOM LINER FOR GRIP BOX

- 57 PIN-PITMAN TO DRAWING ARM
- 59 BREAKER BOLT GUARD PLATES
- 70 FRONT FEED STOP
- 71 CONTROL SWITCH
- 72 CONTROL COUPLING

- 503 ECCENTRIC SHAFT
- 504 PIN FOR ECCENTRIC
- 505 ECCENTRIC PIN ADJUSTING SCREW
- 506 SLEEVE FOR ECCENTRIC PIN
- 507 WASHER FOR ECCENTRIC PIN
- 508 PITMAN
- 509 PITMAN BUSHING - MAIN EYE
- 510 PITMAN BUSHING - SMALL EYE
- 533 BUSHINGS FOR ECCENTRIC SHAFT
- 550 PITMAN KNOCKOFF NUT
- 563 STRAIGHTENER BRACKET MOUNTING PLATE
- 564 BUSHINGS FOR GUIDE ROLLERS
- 565 PIN FOR WIRE GUIDE ROLLER
- 566 WIRE GUIDE ROLLER
- 567 CONTROL ARM
- 568 CONTROL ARM FULCRUM PIN
- 569 CONTROL ARM FULCRUM PIN BUSHINGS
- 570 DRIVEN SHEAVE
- 571 MOTOR SHEAVE
- 572 V-BELTS
- 573 WIRE GUIDE ROLLER COLLAR
- 574 WIRE RETAINER FINGER
- 575 BUSHING FOR WIRE GUIDE ROLLER

OPTIONAL

- 200 INCH GRIP SLIDE COMPLETE PARTS 201 & 102 TO 108 INCL.
- 201 INCHING GRIP SLIDE
- 102 PINS FOR INCHING FINGERS
- 103 LATCH FOR INCHING FINGERS WITH KNOB
- 104 LATCH SPRING
- 105 SPRING PLUG FOR INCHING FINGERS
- 106 SPRING FOR SPRING PLUG
- 108 REAR FEED STOP

- 1400 GRIP FEED SLIDE COMPLETE WITH PARTS LISTED BELOW
- 1401 GRIP FEED SLIDE
- 1402 HOLLOW SCREW FOR GRIP FEED SLIDE
- 1403 SPRING FOR GRIP FEED SLIDE HOLLOW SCREW
- 1404 BACKING BLOCKS FOR GRIP FEED SLIDE
- 1405 STATIONARY WEDGE BLOCKS FOR GRIP FEED SLIDE
- 1406 GRIP FEED SLIDE ROLLER CAGES
- 1407 BOTTOM LINER FOR GRIP FEED SLIDE
- 1408 CAGE ACT. SPRING PLUNGER ASSY FOR GRIP FEED SLIDE
- 1409 BUMPING PLATE FOR GRIP FEED SLIDE
- 1410 CYLINDER ROD EXTENSION WITH RETAINER COLLAR
- 1411 STAY BAR
- 1412 AIR CYLINDER FOR GRIP FEED SLIDE

300 DIE SLIDE COMPLETE PARTS 301 TO 308 INCL.

- 301 DIE SLIDE
- 302 DIE SLIDE COVER
- 303 DIE SLIDE COVER CLAMP
- 304 DIE SLIDE BUSHING CLAMP
- 305 DIE SLIDE BUSHING HOLDER
- 306 DIE SLIDE BUMPING PLATES
- 308 DIE SLIDE GASKET

- 400 GRIP BOX COMPLETE WITH PARTS LISTED BELOW
- 401 GRIP BOX
- 403 HANDLE FOR GRIP BOX
- 404 HOLLOW SCREW FOR GRIP BOX
- 405 SPRING FOR GRIP BOX HOLLOW SCREW
- 406 SCREWS FOR ROLLER CAGE ACTUATING SPRING
- 407 ROLLER CAGE ACTUATING SPRING
- 408 PINS FOR GRIP BLOCKS RELEASE
- 410 PLUGS FOR ROLLER CAGE SPRING
- 411 PIN FOR GRIP RELEASE HANDLE
- 417 LOCKSCREWS FOR PLUG

WHEN ORDERING REPLACEMENTS STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE AND DESIGNATE PART BY BOTH NAME AND NUMBER