


A J A X

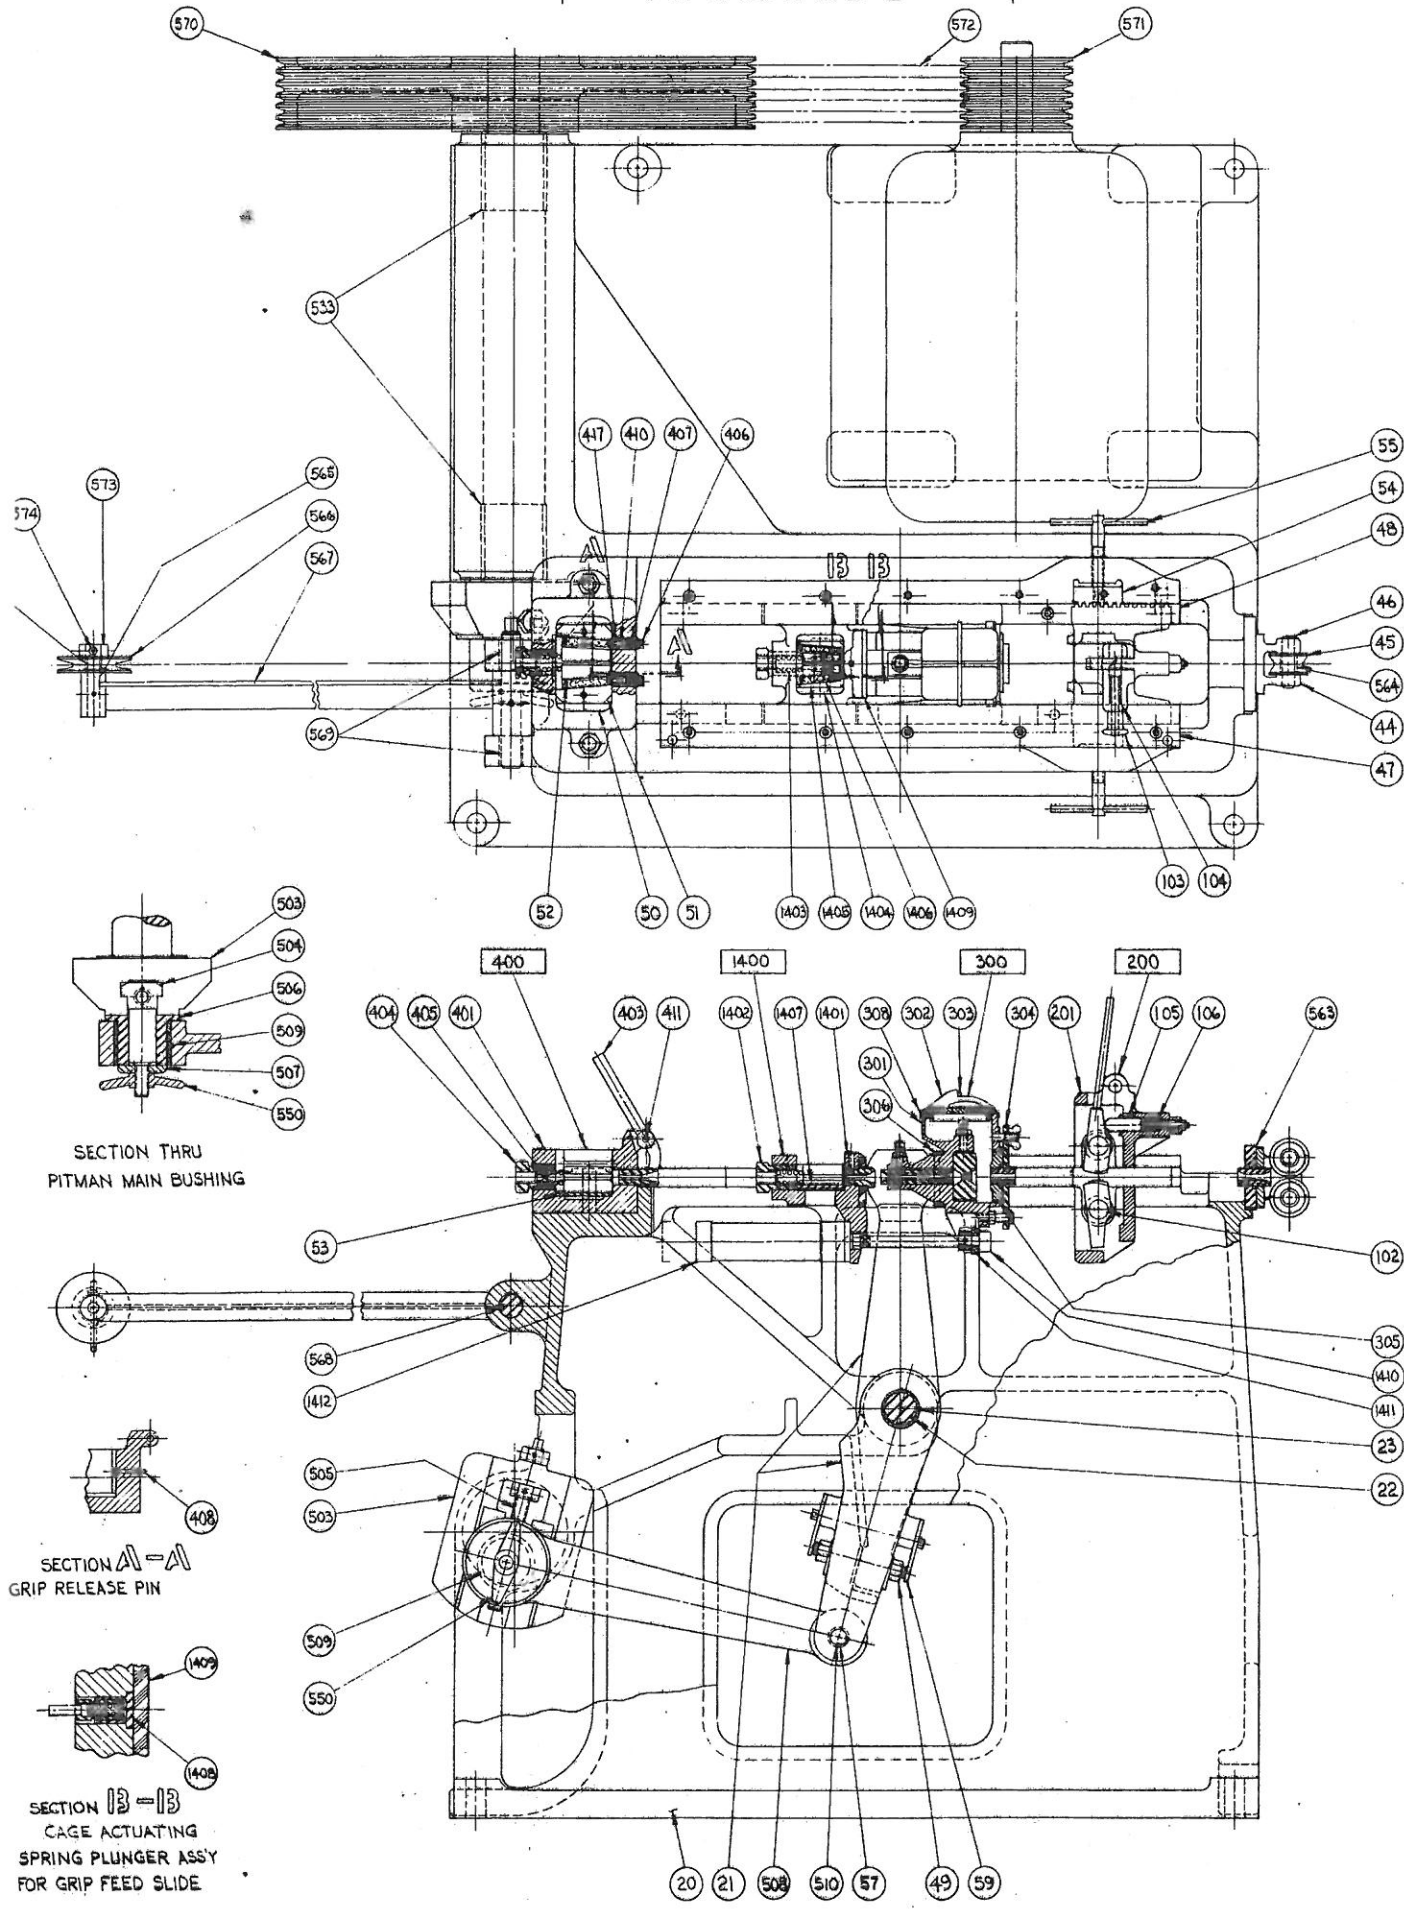

<ul style="list-style-type: none"> 20 BASE 21 DRAWING ARM 22 DRAWING ARM FULCRUM PIN 23 DRAWING ARM FULCRUM PIN BUSHINGS 44 STRAIGHTENER BRACKET 45 GUIDE ROLLERS 46 PINS FOR GUIDE ROLLERS 47 COVER PLATES FOR SLIDES 48 LINERS FOR BASE 49 BREAKER BOLT FOR DRAWING ARM 50 BACKING BLOCKS FOR GRIP 51 STATIONARY WEDGE BLOCKS FOR GRIP 52 ROLLER CAGES 53 BOTTOM LINER FOR GRIP BOX 54 CLAMPING RACKS FOR INCHING GRIP SLIDE 55 SCREWS FOR CLAMPING RACKS 57 PIN-PITMAN TO DRAWING ARM 59 BREAKER BOLT GUARD PLATES 	<ul style="list-style-type: none"> 503 ECCENTRIC SHAFT 504 PIN FOR ECCENTRIC 505 ECCENTRIC PIN ADJUSTING SCREW 506 SLEEVE FOR ECCENTRIC PIN 507 WASHER FOR ECCENTRIC PIN 508 PITMAN 509 PITMAN BUSHING - MAIN EYE 510 PITMAN BUSHING - SMALL EYE 533 BUSHINGS FOR ECCENTRIC SHAFT 550 PITMAN KNOCKOFF NUT 563 STRAIGHTENER BRACKET MOUNTING PLATE 564 BUSHINGS FOR GUIDE ROLLERS 565 PIN FOR WIRE GUIDE ROLLER 566 WIRE GUIDE ROLLER 567 CONTROL ARM 568 CONTROL ARM FULCRUM PIN 569 CONTROL ARM FULCRUM PIN BUSHINGS 570 DRIVEN SHEAVE 571 MOTOR SHEAVE 572 V-BELTS 573 WIRE GUIDE ROLLER COLLAR 574 WIRE RETAINER FINGER 575 BUSHING FOR WIRE GUIDE ROLLER
---	---

<ul style="list-style-type: none"> 200 INCH GRIP SLIDE COMPLETE PARTS 201 & 102 TO 106 INCL. 201 INCHING GRIP SLIDE 102 PINS FOR INCHING FINGERS 103 LATCH FOR INCHING FINGERS WITH KNOB 104 LATCH SPRING 105 SPRING PLUG FOR INCHING FINGERS 106 SPRING FOR SPRING PLUG 	<ul style="list-style-type: none"> 1400 GRIP FEED SLIDE COMPLETE WITH PARTS LISTED BELOW 1401 GRIP FEED SLIDE 1402 HOLLOW SCREW FOR GRIP FEED SLIDE 1403 SPRING FOR GRIP FEED SLIDE HOLLOW SCREW 1404 BACKING BLOCKS FOR GRIP FEED SLIDE 1405 STATIONARY WEDGE BLOCKS FOR GRIP FEED SLIDE 1406 GRIP FEED SLIDE ROLLER CAGES 1407 BOTTOM LINER FOR GRIP FEED SLIDE 1408 CAGE ACT. SPRING PLUNGER ASS'Y FOR GRIP FEED SLIDE 1409 BUMPING PLATE FOR GRIP FEED SLIDE 1410 CYLINDER ROD EXTENSION WITH RETAINER COLLAR 1411 STAY BAR 1412 AIR CYLINDER FOR GRIP FEED SLIDE
---	--

<ul style="list-style-type: none"> 300 DIE SLIDE COMPLETE PARTS 301 TO 308 INCL. 301 DIE SLIDE 302 DIE SLIDE COVER 303 DIE SLIDE COVER CLAMP 304 DIE SLIDE BUSHING CLAMP 305 DIE SLIDE BUSHING HOLDER 306 DIE SLIDE BUMPING PLATES 308 DIE SLIDE GASKET 	<ul style="list-style-type: none"> 400 GRIP BOX COMPLETE WITH PARTS LISTED BELOW 401 GRIP BOX 403 HANDLE FOR GRIP BOX 404 HOLLOW SCREW FOR GRIP BOX 405 SPRING FOR GRIP BOX HOLLOW SCREW 406 SCREWS FOR ROLLER CAGE ACTUATING SPRING 407 ROLLER CAGE ACTUATING SPRING 408 PINS FOR GRIP BLOCKS RELEASE 410 PLUGS FOR ROLLER CAGE SPRING 411 PIN FOR GRIP RELEASE HANDLE 417 LOCKSCREWS FOR PLUG
---	--

WHEN ORDERING REPLACEMENTS STATE SERIAL NUMBER AND SIZE STAMPED ON NAME PLATE OF MACHINE AND DESIGNATE PART BY BOTH NAME AND NUMBER