



- 20 BASE
- 21 DRAWING ARM
- 22 DRAWING ARM FULCRUM PIN
- 23 DRAWING ARM FULCRUM PIN BUSHINGS
- 24 REMOVABLE PIN FOR DRWG. & INCH. ARMS
- 30 INCHING ARM
- 43 STRAIGHTENER RODS
- 44 STRAIGHTENER BRACKET
- 45 STRAIGHTENER ROLLERS
- 46 STRAIGHTENER ROLLER PINS
- 47 COVER PLATES FOR SLIDES
- 48 LINERS FOR BASE
- 49 BREAKER BOLT FOR DRAWING ARM
- 50 BACKING BLOCKS FOR GRIP
- 51 STATIONARY WEDGE BLOCKS FOR GRIP
- 52 ROLLER CAGES
- 53 BOTTOM LINER FOR GRIP BOX
- 54 CLAMPING RACKS FOR INCH. GRIP SLIDE
- 55 SCREWS FOR CLAMPING RACKS
- 57 PIN-PITMAN TO DRAWING ARM
- 58 STRAIGHTENER ROD BUSHINGS
- 59 BREAKER BOLT GUARD PLATES
- 537 CONN. LINK FOR INCH. FEED SLIDE
- 538 BUSH. FOR CONN. LINK MAIN EYE
- 539 PIN FOR FULC. LEVER TO CONN. LINK
- 540 BUSH. FOR CONN. LINK SMALL EYE
- 541 FULC. LEVER FOR INCH. FEED SLIDE
- 542 SHEAR PIN FOR INCH. SAFETY
- 543 BUSH. FOR INCH. SAFETY (SET OF THREE)
- 544 SHAFT FOR INCH. FEED SLIDE FULC. LEVER
- 545 BUSH. FOR SHAFT
- 546 BUSH. FOR INCH. ARM
- 502 HOUSING FOR ECCENTRIC SHAFT
- 503 ECCENTRIC AND SPROCKET SHAFT
- 504 PIN FOR ECCENTRIC
- 505 ECCENTRIC PIN ADJUSTING SCREW
- 506 SLEEVE FOR ECCENTRIC PIN
- 507 WASHER FOR ECCENTRIC PIN
- 508 PITMAN
- 509 PITMAN BUSHING-MAIN EYE
- 510 PITMAN BUSHING-SMALL EYE
- 517 TIE RODS
- 519 DRIVEN SPROCKET
- 520 SPROCKET RETAINER WASHER
- 521 DRIVING SPROCKET
- 522 ROLLER CHAIN
- 523 IDLER ROLLER
- 524 IDLER ROLLER BEARING
- 525 IDLER ROLLER PIN
- 526 IDLER ROLLER RETAINING CAP
- 527 IDLER ARM
- 528 IDLER ARM FULC. PIN
- 529 EYE BOLT LINK PIN
- 530 IDLER ADJ EYE BOLT
- 531 EYE BOLT SPACER WASHERS
- 532 EYE BOLT ROCKER PIN
- 533 BUSHINGS FOR ECCENTRIC SHAFT HOUSING
- 534 KEYS FOR ECCENTRIC SHAFT HOUSING
- 535 BOLTS FOR ECCENTRIC SHAFT HOUSING

- 100 INCH. FEED SLIDE COMPLETE WITH PARTS 101 TO 107 INCL.
- 101 INCHING FEED SLIDE
- 102 PINS FOR INCHING FINGERS
- 103 LATCH FOR INCHING FINGERS
- 104 LATCH SPRING
- 105 SPRING PLUG FOR INCHING FINGERS
- 106 SPRING FOR SPRING PLUG
- 107 PIN FOR INCHING FEED SLIDE
- 200 INCH. GRIP SL. COMPLETE WITH PARTS 201 & 102 TO 106 INCL.
- 201 INCH. GRIP SLIDE
- 102 PINS FOR INCHING FINGERS
- 103 LATCH FOR INCHING FINGERS
- 104 LATCH SPRING
- 105 SPRING PLUG FOR INCHING FINGERS
- 106 SPRING FOR SPRING PLUG

- 300 DIE SL. COMPLETE WITH PARTS 301 TO 308 INCL.
- 301 DIE SLIDE
- 302 DIE SLIDE COVER
- 303 DIE SLIDE COVER CLAMP
- 304 DIE SLIDE BUSHING CLAMP
- 305 DIE SLIDE BUSHING HOLDER
- 306 DIE SLIDE BUMPING PLATES
- 308 DIE SLIDE GASKET
- 400 GRIP BOX COMPLETE WITH PARTS 401 & 403 TO 409 INCL.
- 401 GRIP BOX
- 403 HANDLE FOR GRIP BOX
- 404 HOLLOW SCREW FOR GRIP BOX
- 405 SPRING FOR GRIP BOX HOLLOW SCREW
- 406 SCREWS FOR ROLLER CAGE ACTUATING SPR.
- 407 ROLLER CAGE ACTUATING SPRINGS
- 408 PINS FOR GRIP BLOCKS RELEASE
- 409 PINS FOR GRIP BLOCKS

WHEN ORDERING REPLACEMENTS STATE
SERIAL NUMBER AND SIZE STAMPED ON
NAME PLATE OF MACHINE AND DESIGNATE
PART BY BOTH NAME AND NUMBER