



- | | |
|--|---|
| <ul style="list-style-type: none"> 20 BASE 21 DRAWING ARM 22 DRAWING ARM FULCRUM PIN 23 DRAWING ARM FULCRUM PIN BUSHINGS 24 REMOVABLE PIN FOR DRWG. & INCH. ARMS 25 PIN FOR DRAWING & INCHING ARMS 30 INCHING ARM 31 INCHING HAND LEVER 32 INCHING LEVER 33 INCHING LEVER FULCRUM PIN 34 INCHING ARM LIFTER 35 INCHING ARM LIFTER HANDLE 36 INCHING ARM LIFTER FULCRUM PIN 37 THROW OUT BELL CRANK 38 THROW OUT BELL CRANK FULCRUM PIN 39 SPRING FOR THROW OUT BELL CRANK 40 SPRING RODS WITH COLLARS 41 SPRING RODS SLEEVES 42 SPRINGS FOR SPRING RODS 43 STRAIGHTENER RODS 44 STRAIGHTENER BRACKET 45 STRAIGHTENER ROLLERS 46 STRAIGHTENER ROLLER PINS 47 COVER PLATES FOR SLIDES 48 LINERS FOR BASE 49 BREAKER BOLT FOR DRAWING ARM 50 BACKING BLOCKS FOR GRIP 51 STATIONARY WEDGE BLOCKS FOR GRIP 52 ROLLER CAGES 53 BOTTOM LINER FOR GRIP BOX 54 CLAMPING RACKS FOR INCH. GRIP SLIDE 55 SCREWS FOR CLAMPING RACKS 57 PIN - PITMAN TO DRAWING ARM 58 STRAIGHTENER ROD BUSHINGS 59 BREAKER BOLT GUARD PLATES | <ul style="list-style-type: none"> 502 HOUSING FOR ECCENTRIC SHAFT 503 ECCENTRIC AND SPROCKET SHAFT 504 PIN FOR ECCENTRIC 505 ECCENTRIC PIN ADJUSTING SCREW 506 SLEEVE FOR ECCENTRIC PIN 507 WASHER FOR ECCENTRIC PIN 508 PITMAN 509 PITMAN BUSHING - MAIN EYE 510 PITMAN BUSHING - SMALL EYE 517 TIE RODS 519 DRIVEN SPROCKET 520 SPROCKET RETAINER WASHER 521 DRIVING SPROCKET 522 ROLLER CHAIN 523 IDLER ROLLER 524 IDLER ROLLER BEARING 525 IDLER ROLLER PIN 526 IDLER ROLLER RETAINING CAP 527 IDLER ARM 528 IDLER ARM FULC. PIN 529 EYE BOLT LINK PIN 530 IDLER ADJ EYE BOLT 531 EYE BOLT SPACER WASHERS 532 EYE BOLT ROCKER PIN 533 BUSHINGS FOR ECCENTRIC SHAFT HOUSING 534 KEYS FOR ECCENTRIC SHAFT HOUSING 535 BOLTS FOR ECCENTRIC SHAFT HOUSING |
|--|---|

- | | |
|--|---|
| <ul style="list-style-type: none"> 100 INCH. FEED SLIDE COMPLETE WITH PARTS 101 TO 107 INCL. 101 INCHING FEED SLIDE 102 PINS FOR INCHING FINGERS 103 LATCH FOR INCHING FINGERS 104 LATCH SPRING 105 SPRING PLUG FOR INCHING FINGERS 106 SPRING FOR SPRING PLUG 107 PIN FOR INCHING ARM | <ul style="list-style-type: none"> 200 INCH. GRIP SL. COMPLETE WITH PARTS 201 & 102 TO 106 INCL. 201 INCH. GRIP SLIDE 102 PINS FOR INCHING FINGERS 103 LATCH FOR INCHING FINGERS 104 LATCH SPRING 105 SPRING PLUG FOR INCHING FINGERS 106 SPRING FOR SPRING PLUG |
|--|---|

- | | |
|---|---|
| <ul style="list-style-type: none"> 300 DIE SL. COMPLETE WITH PARTS 301 TO 308 INCL. 301 DIE SLIDE 302 DIE SLIDE COVER 303 DIE SLIDE COVER CLAMP 304 DIE SLIDE BUSHING CLAMP 305 DIE SLIDE BUSHING HOLDER 306 DIE SLIDE BUMPING PLATES 307 DIE SLIDE INCHING PLATE 308 DIE SLIDE GASKET | <ul style="list-style-type: none"> 400 GRIP BOX COMPLETE WITH PARTS 401 & 403 TO 409 INCL. 401 GRIP BOX 403 HANDLE FOR GRIP BOX 404 HOLLOW SCREW FOR GRIP BOX 405 SPRING FOR GRIP BOX HOLLOW SCREW 406 SCREWS FOR ROLLER CAGE ACTUATING SPR. 407 ROLLER CAGE ACTUATING SPRINGS 408 PINS FOR GRIP BLOCKS RELEASE 409 PINS FOR GRIP BLOCKS |
|---|---|

WHEN ORDERING REPLACEMENTS STATE
SERIAL NUMBER AND SIZE STAMPED ON
NAME PLATE OF MACHINE AND DESIGNATE
PART BY BOTH NAME AND NUMBER