



- 20 BASE
- 21 DRAWING ARM
- 22 DRAWING ARM FULCRUM PIN
- 23 DRAWING ARM FULCRUM PIN BUSHINGS
- 24 REMOVABLE PIN FOR DRWG & INCH. ARMS
- 37 THROWOUT BELL CRANK
- 38 THROWOUT BELL CRANK FULCRUM PIN
- 39 SPRING FOR THROWOUT BELL CRANK
- 40 SPRING RODS WITH COLLARS
- 41 SPRING ROD SLEEVES
- 42 SPRINGS FOR SPRING RODS
- 43 STRAIGHTENER RODS
- 47 COVER PLATES FOR SLIDES
- 48 LINERS FOR BASE
- 49 BREAKER BOLT FOR DRAWING ARM
- 54 CLAMPING RACKS FOR INCH GRIP SLIDE
- 55 SCREWS FOR CLAMPING RACKS
- 57 PIN-PITMAN TO DRAWING ARM

- 60 BREAKER BOLT NUT
- 61 SPRING HOOK FOR BASE
- 62 STOP FOR THROWOUT BELL CRANK
- 63 SHAFT FOR THROWOUT BELL CRANK STOP
- 64 HANDLE FOR STOP
- 65 FEED PULL ROD EYES
- 66 FEED EYE BUSHINGS
- 67 FEED PULL ROD
- 68 SPRING SPACER COLLAR
- 69 SPRING GUIDE NUT
- 502 HOUSING FOR ECCENTRIC SHAFT
- 503 ECCENTRIC AND SPROCKET SHAFT
- 504 PIN FOR ECCENTRIC
- 505 ECCENTRIC PIN ADJUSTING SCREW
- 506 SLEEVE FOR ECCENTRIC PIN
- 507 WASHER FOR ECCENTRIC PIN
- 508 PITMAN
- 509 PITMAN BUSHING -MAIN EYE

- 510 PITMAN BUSHING -SMALL EYE
- 517 TIE RODS
- 519 DRIVEN SPROCKET
- 520 SPROCKET RETAINER WASHER
- 521 DRIVING SPROCKET
- 522 ROLLER CHAIN
- 523 IDLER ROLLER
- 524 IDLER ROLLER BEARING
- 525 IDLER ROLLER PIN
- 526 IDLER ROLLER RETAINING CAP
- 527 IDLER ARM
- 528 IDLER ARM FULCRUM PIN
- 533 BUSHINGS FOR ECCENTRIC SHAFT HOUSING
- 534 KEYS FOR ECCENTRIC SHAFT HOUSING
- 535 BOLTS FOR ECCENTRIC SHAFT HOUSING
- 536 ADJUSTMENT SCREW